

PITBULL
ROAD BIKE PEDAL

PATENT NO.: US 10,259,528 B1

Installation Instructions




Approved by Charlie
at Pitbull

Black Cleat = 5° Float / Gray Cleat = 0° Float

1. Remove cleat from box, selecting float and / or no float cleat.
2. Remove spring steel from cleat. Use allen wrench provided in box.
3. Use three (3) screws for mounting and adjusting pivot for your preference. Be sure the two screws with rounded heads go in two back holes with washers first. The mounting screw under the spring steel has a flat head and no washer.
4. Reinstall spring steel. Spring steel **MUST** be tight and flush/ level with the cleat surface.

Spring Steel Tension Adjustment

Once cleats are on shoe but before wearing, connect cleat to pedal on bike. Once connected, take supplied allen wrench and back set screw out until it makes contact with spring steel. Take shoes off bike, make 1/4 turns counter-clockwise to stiffen the spring and increase engagement to what you prefer. There are a small number of spring steel plates that might have been over-treated with heat. If you have any trouble with your spring steel plate contact us and we will replace it right away.

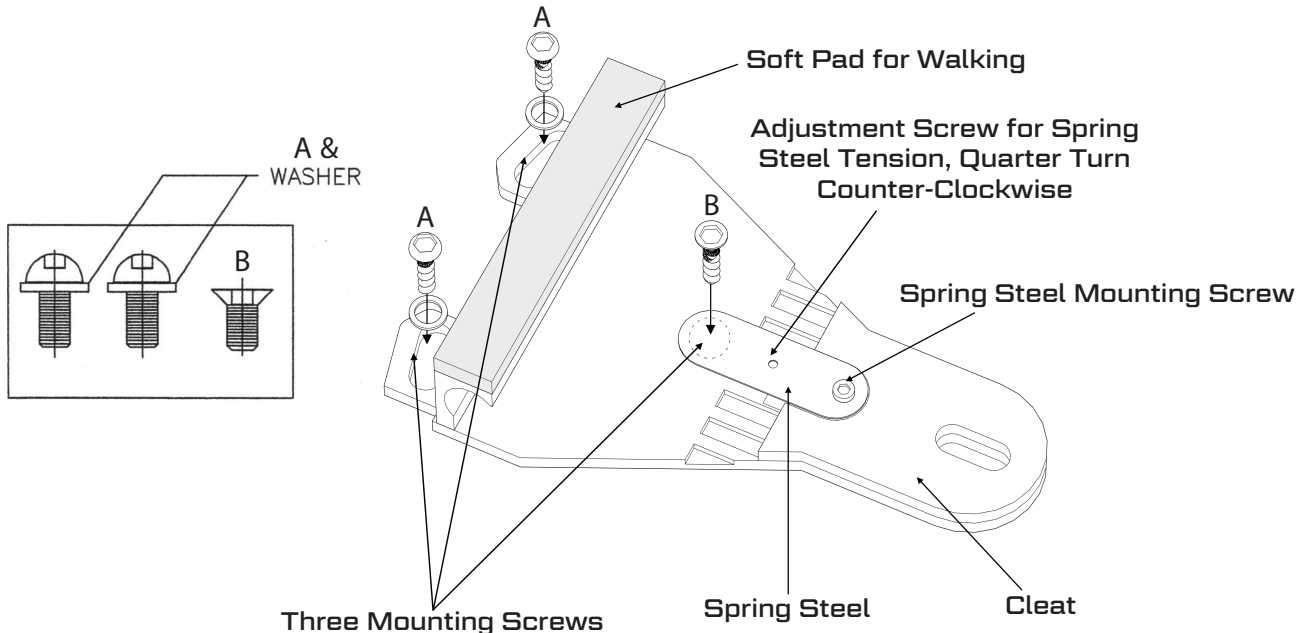

NOW YOU ARE READY TO LOCK & ROLL!

Scuffs will appear on the stainless steel pedal. They are superficial but they are definitely visible with the naked eye. They do not cause any structural fatigue and that is how we offer a two year warranty on the KoM Pedal and a lifetime warranty on the training pedal. (The scarring on the pedal is how we came up with the name Pitbull since these are like teeth marks!)

LIFETIME WARRANTY: We will replace the pedal that is defective or breaks during normal use. Please send pedal to: Pitbull Bike Pedal, 1010 Park Court Suite E, Safety Harbor, FL 34695 and include your return address. We will send out a replacement right away!

